
BASE STATION PLACEMENT



Physical Components



1. Determine where you want to place your Base Station. This will be the spot where the Base Station is placed every time you wish to paint your fields.

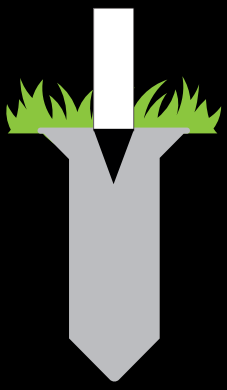


2. Once you have selected where the Base Station will go, install a Turf Tank Ground Spike in that spot.

3. Place the Tripod where the Ground Spike has been installed so that the Prism Pole (center pole of Tripod) rests in the Spike.



4. Ensure the Tripod's level bubble is centered.

Make sure the Tripod is level throughout operation.

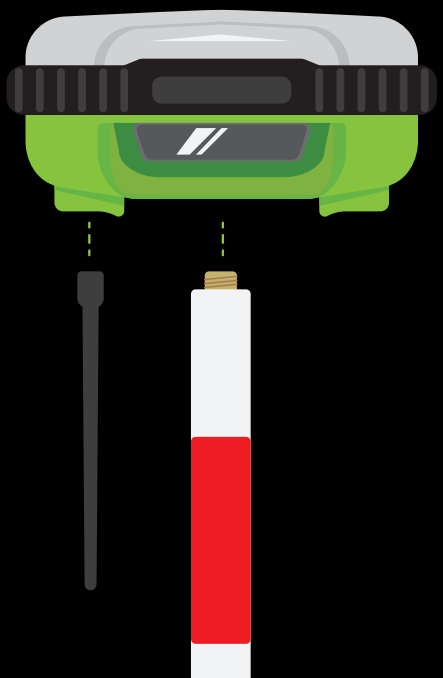

5. Attach the Large Antenna (29 cm) to the Base Station.

6. Attach the Base Station to the Prism Pole.

DO NOT TURN ON BASE STATION WITHOUT AN ATTACHED ANTENNA

Something not right? Questions?
Call a Robot Expert anytime: 770-818-6020